# N5A HOOVER® USER INSTRUCTIONS

# Frost Free FRIDGE-FREEZER

FRIDGE-FREEZER HF 24A 007, HF 24C 001, HF 27A 007, HF 27C 001, HF 29C. HFA 27K, HFA 29K

*Contents* *Page*


Installing you fridge-freezer 2
Everyday with your fridge-freezer 7
Looking after your fridge-freezer 12
Safety advice 12
What to do when going on holiday or moving house 13
If you think your fridge-freezer is faulty 13
If you need to get your fridge-freezer serviced 15
Guarantee 16
Service Map 16


Note: Refer to serial label fitted inside the fridge on left for details of Energy Consumption, Freezing Capacity, Gross and Storage Volumes.

*You are now the owner of a FROST FREE Fridge-Freezer. This product will freeze food quicker than conventional models and you will never have to defrost it. There will be no build up of frost in the freezer or on the frozen contents.*

*The freezer is cooled by the circulation of cold air driven by a small electric fan which is situated in a small compartment behind the freezer backwall - you will probably be able to hear it running if the fridge-freezer is located in a quiet place.*

*Also built in behind the backwall is a heat exchanger which cools the circulating air down to freezer temperature. Any moisture that the air picks up will be deposited onto this heat exchanger in the form of frost. This in turn is automatically removed by the action of an electric heater which melts the frost.*

*The fridge section is cooled by the "cold wall" at the back of the compartment. The temperature can be adjusted by the thermostat - a mid range setting is usually the best, but adjustment will be needed if the product is kept in an unheated area in winter, or in very hot weather (see page 6 for details of adjustment). A small amount of frost will form on the backwall. This will automatically be removed when the fridge goes through its own defrost cycle.*

*Water from both the fridge and the freezer defrosts is collected in a container at the rear of the fridge-freezer and is evaporated by surplus heat from the compressor.*

*Both the fridge and freezer defrost cycles are controlled by a microprocessor unit.*

# Installing your fridge-freezer

## 1 Important

- Please read this instruction book carefully before installing or using your appliance.
- It is important that this instruction book should be kept in a safe place for future reference.
- Should you sell or transfer ownership of this appliance, please pass on these instructions to the new owner.
- The door/s of your appliance may be fitted with coloured packing spacers, please ensure that they are removed before use and disposed of.

### For appliances with isobutane (R600a)

Isobutane is a natural gas that does not harm the environment. Isobutane is however flammable. Therefore:

Do not use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.

Do not damage the refrigerant circuit.

Do not use electrical appliances inside the food storage of the appliance.

Keep any ventilation openings in the appliance enclosure or in the structure for building in, clear of obstruction.

## 2 Dispose of your old fridge and freezer

Make sure, before disposing of your old freezer, that it is safe and will not cause accidents.

For information on the disposal of the appliance contact your retailer or the local authority responsible for disposal.

### If you are throwing it away

Remove the hinges or latch to ensure that a child cannot get trapped inside.

If they won't unscrew, knock them off with a sledge hammer.

### If it will be re-used

Secure the door to prevent accidents in transit.

## 3 Check the voltage of your new fridge-freezer

Check that the voltage on the serial label fitted inside the fridge on the left matches the voltage of the electrical supply in your home.

If in doubt, see your local Electricity Company, or consult a competent electrician.

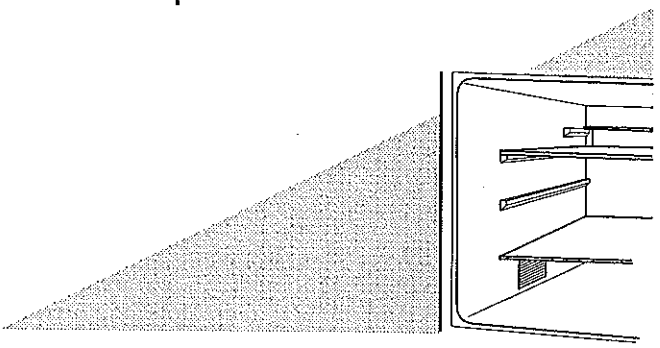

## 4 Decide where to locate it

Bear these points in mind when locating your fridge-freezer.

The fridge-freezer should not be located in a cold place such as an unheated garage, cellar, outhouse or cold kitchen.

Not close to any sources of direct heat.

The fridge-freezer is designed to perform in accordance with International Standards; for operating in ambient temperatures of between 10°C (50°F) and 32°C (90°F), although it will perform satisfactorily at an ambient temperature of 7°C (45°F).

Not too damp or humid.

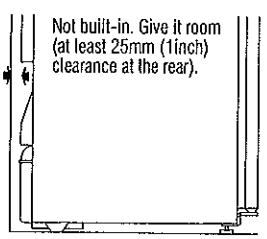

Not built-in. Give it room (at least 25mm (1inch) clearance at the rear).

Not in a cold place such as an unheated garage or cellar.

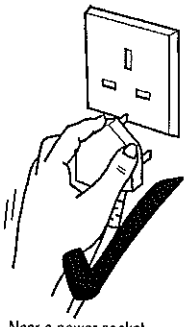

Near a power socket (check that the plug fits).

# 5 If you want to hinge the doors on the other side

## 1. You will need

- Philips screwdriver (Cross Headed)
- Normal screwdriver (5mm flat blade)

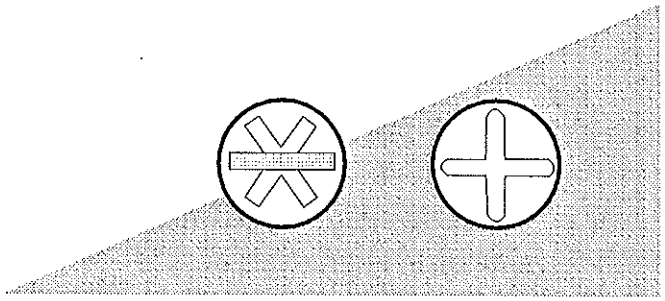

## 2. Unplug the Fridge-Freezer

## 3. Remove the lower door (See Fig. A)

- Lean the cabinet back but do not lay it on its rear (use the packaging to protect the base at the rear).
- Remove the bottom hinge by unscrewing the two screws.
- Lift the lower door clear of the centre hinge.
- Keep aside any spacing washers for re-use on the other side.

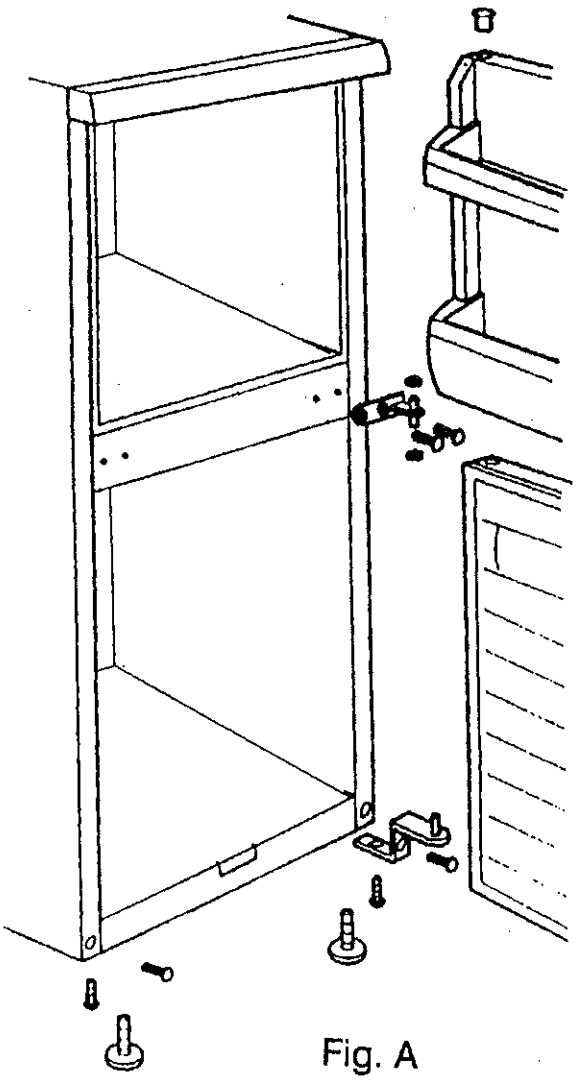

Fig. A

## 4. Remove the upper door

- Remove the centre hinge by unscrewing the two screws.
- Lift the upper door clear of the top hinge pin.
- Remove the top hinge pin with a normal screwdriver as shown in Fig. B.

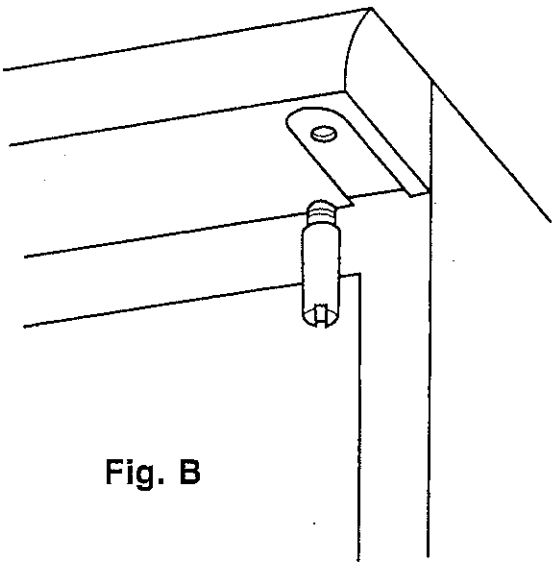

Fig. B

## 5. Transfer the plastic cover buttons

- Lever off the 2 plastic cover buttons with a screwdriver and transfer them to the right hand side (for the centre hinge).

### 6. *Transfer the hinge adaptors*

(Top and bottom)

- Remove the adhesive disc at the left-hand end of the top of each door, using a pin to lever them off.
- Transfer the hinge adaptor to these holes.
- Transfer the hinge adaptor at the bottom of the doors.
- Refit the adhesive discs to the top right-hand side.

### 7. *Re-fit the upper door*

- Re-fit the top hinge pin on the left-hand side.
- Fit the spacing washers as necessary.
- Lift the door into the hinge pin.
- Insert the centre hinge post into the hinge adaptor at the bottom of the door.
- Re-fit the centre hinge on the left-hand side of the cabinet.

### 8. *Re-fit the lower door*

- Lift the door into the centre hinge.
- Insert the bottom hinge post into the hinge adaptor at the bottom of the door.
- Re-fit the bottom hinge on the left-hand side of the cabinet.
- Re-set the cabinet in an upright position. (Allow 2 hours for the refrigerant to settle).

### 9. *Door gasket seal*

- Following door reversal, rub gasket edges with a warm cloth. This will restore any flattened shape to its original profile and provide the door seal.

## 6 *Slide the fridge-freezer into position*

## 7 *Check that it is level*

If the fridge-freezer is not level, adjust the feet (underneath at the front).

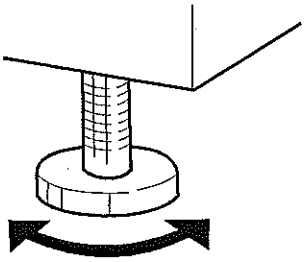

## 8 *Clean inside it*

1. Thoroughly clean inside with a warm solution of bicarbonate of soda
2. Rinse with water.
3. Wipe dry.

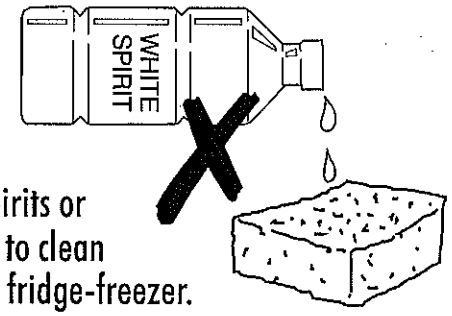


**NEVER** use spirits or solvent cleaners to clean any part of your fridge-freezer.

## 9 *Plugging in your fridge-freezer*

For your convenience your fridge-freezer is supplied complete with a non-rewirable plug, incorporating a 13 Amp fuse ready to plug into a power socket.

In the event of replacing a fuse in the plug supplied, a 13 Amp fuse approved by ASTA to BS 1362 must be used. If a removable fuse cover is fitted and it becomes lost, the plug must **NOT** be used until a replacement fuse cover has been obtained and fitted. Note the plug manufacturers name or reference number from the plug, and use it to obtain a replacement from your Electricity shop.

If the socket outlets in your home are not of the 13 Amp BS1363 type, cut off the plug and fit the appropriate plug as instructed on page 5.

**When cut off, this plug can constitute a shock hazard if inserted into a socket outlet. It must, therefore, be disposed of safely.**

With alternative plugs a 15 Amp fuse must be fitted either in the plug or at the main fuse box.

***Important***

The wires in the mains lead are coloured in accordance with the following code:

| | | |
|---|---|---|
| green & yellow | ~ | earth |
| blue | ~ | neutral |
| brown | ~ | live |

As the colour of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, the wire which is coloured green & yellow must be connected to the terminal in the plug which is marked with the letter 'E' or the earth symbol ⏚, or is coloured green or green & yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or is coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or is coloured red.

If the terminals in the plug are not marked or if your are in any doubt as to the correct connections, consult a qualified electrician.

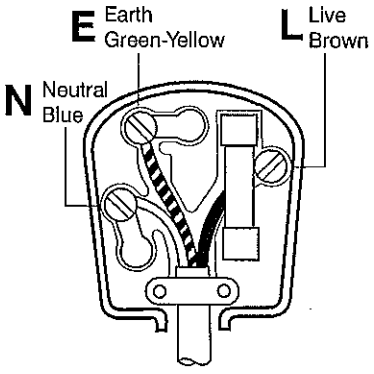


*Diagram showing wiring for a 13 Amp plug*

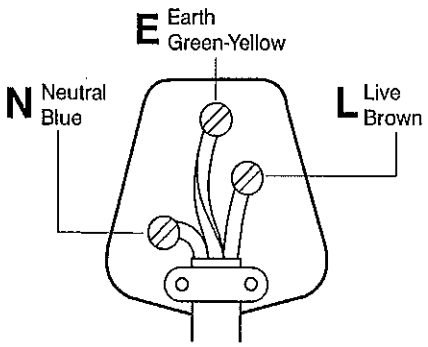


*Diagram showing wiring for a 15 Amp plug*

**"WARNING"**

**THIS APPLIANCE MUST BE EARTHED**

Plug it into the power socket and ensure that the on/off switch is in the on position. The green (or white) light on the control panel marked ⏻ will illuminate.

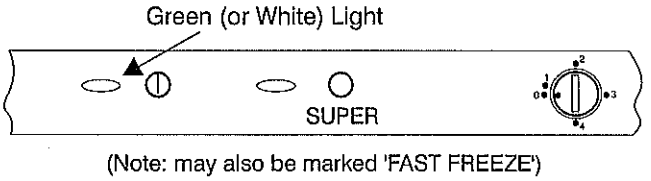


(Note: may also be marked 'FAST FREEZE')

If you unplug your fridge-freezer, always wait at least 6 minutes before plugging it back in.

## 10 Initial thermostat setting

Turn the thermostat dial to 4.

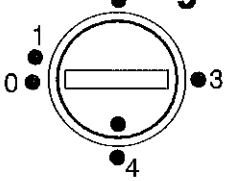


## 11 Put the ice tray in the freezer

1. Fill the ice tray with water.
2. Put it in the top basket.

## 12 Wait 24 hours before loading the freezer

After 24 hours, check that the ice cubes are frozen. If so, the freezer is ready for use.

If they are not frozen, go to 'If you think your fridge-freezer is faulty' on page 13.

## 13 Load the freezer

1. You can now load the freezer.
2. Keep the dial on 4 while you are loading food and for at least 3 hours afterwards.

## 14 Turn the thermostat to its everyday setting

The thermostat dial on the control panel sets the temperature of both the fridge and the freezer. The higher numbered settings are the colder.

**DO NOT** load the fridge compartment until you have reset the thermostat dial to its everyday setting. The setting you select for everyday use depends on individual circumstances.

The following setting are for guidance:

*Dial setting 2*
Well ventilated room with no heating

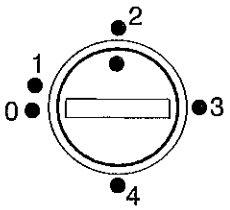


*Dial setting 2-3*
Room with normal heating and ventilation

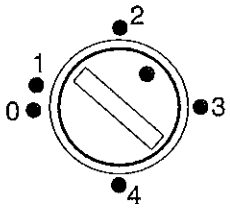


*Dial setting 3-4*
Warm room with cental heating turned up, or boiler in same room

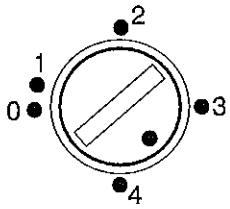


If in doubt start with setting 3 and adjust with experience. setting the thermostat dial to 0 will stop cooling in both fridge and freezer.

## 15 Low temperature conditions

The thermostat which controls the cooling unit operates on the temperature in the fridge compartment so that if the temperature of the air surrounding the fridge becomes too cold; then the air temperture in the fridge will not rise enough to switch the cooling unit back on. This will cause the food in the freezer to become warmer.

**Extended operation under these conditions would spoil the frozen food.**

If you cannot avoid locating your fridge-freezer where low room temperatures will prevail, you may need to set the thermostat dial to 4 or 5 during the winter months. This is normal.

NOTE: This product will not maintain correct storage temperatures if located in a cold place such as an unheated garage, outhouse or cellar.

# Everyday with your fridge-freezer

## Fridge

You can store foods anywhere in the fridge. However, depending on the model you have, there may be special compartments for certain types of food such as eggs, butter and cheese

The crisper shelf has been designed to hold food within the Fridge compartment. In some models this shelf is mad of glass. Care is therefore required when removing the shelf for cleaning. Please note the shelf must NOT be used as a tray to carry food stuffs from the fridge to the table or removed from the fridge for any purpose other than cleaning. Sudden changes of temperature must also be avoided when using or cleaning the shelf. Do NOT immerse in very hot water straight from the fridge. Do NOT stand very hot containers on the shelf.

## Tips

- To prevent food from drying out, cover it with a suitable material such as greaseproof paper or foil.
- The taste of many tinned fruit salads and fruit juices improves with chilling.
- Remove stuffing from cooked poultry before storing.
- If you store tinned meats in the fridge you will find they slice more easily.
- Do not keep bananas or avocados in the fridge.
- Always follow the food manufacturer's instructions with regard to the storage times. The following information is given for guidance if no such instructions are available.

## Fridge compartment storage times

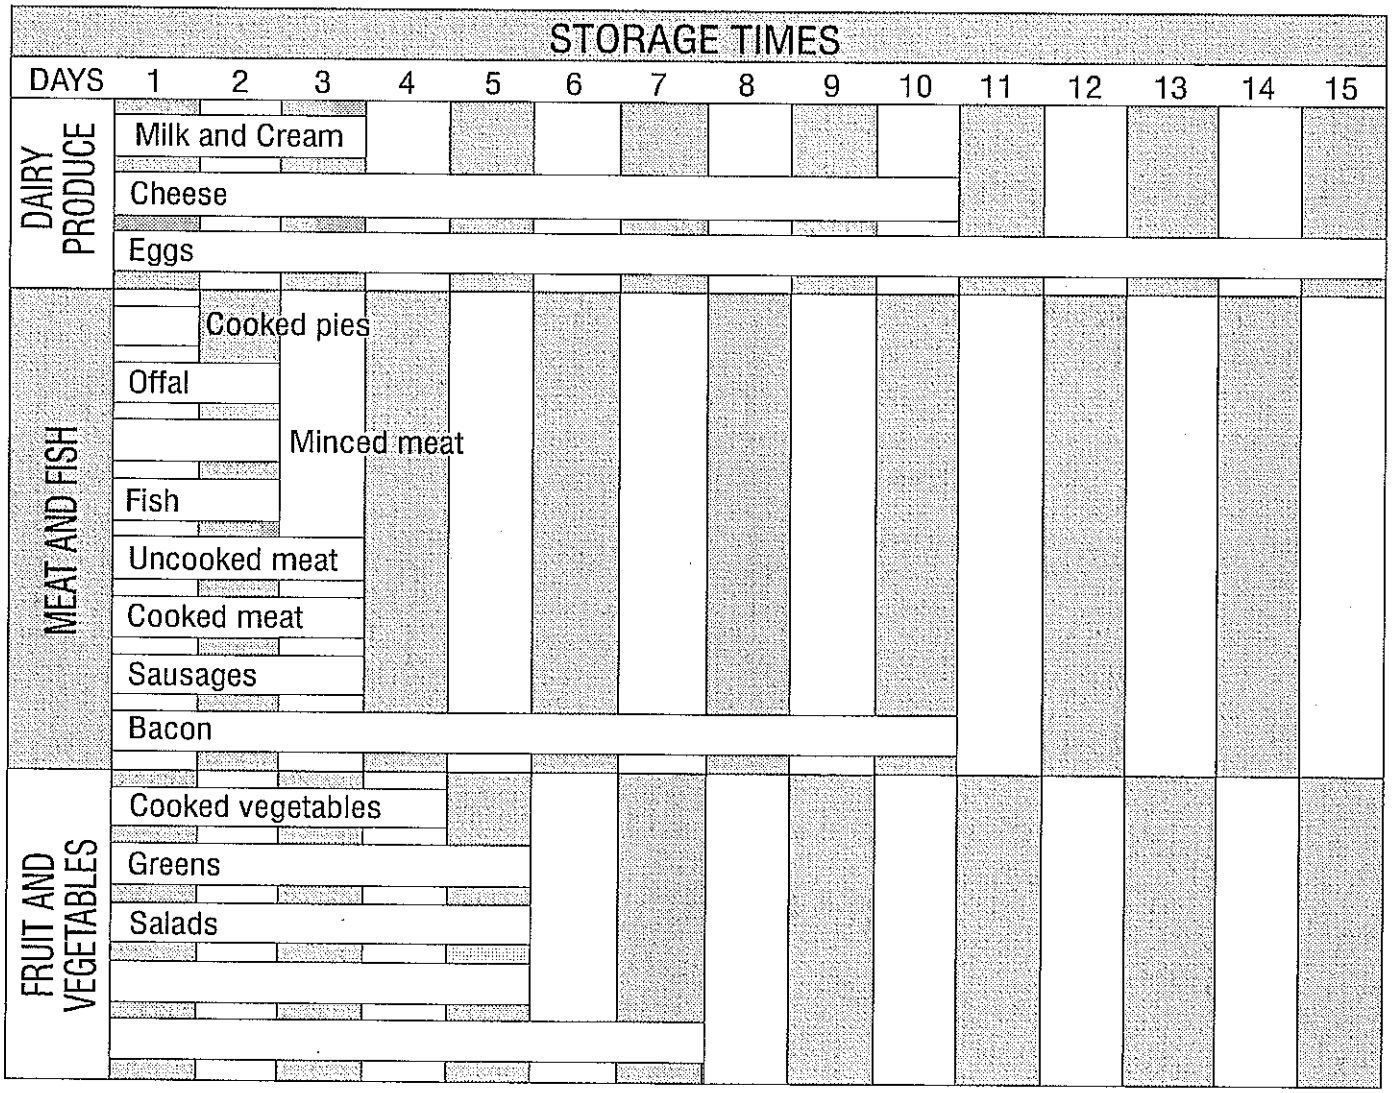

# Freezer

## Ready frozen foods

You will find a wide variety of ready frozen foods at supermarkets and specialist frozen food centres.

Simply follow the manufacturer's instructions regarding storage times and defrosting procedures, remembering that your freezer allows you to store at ✱✱✱ rating - intended for long term storage of frozen foods.

## To keep the food in the best condition:

- make the frozen food store the last stop on your shopping trip.
- bring it home in an insulated bag or box.
- put it into the freezer as soon as you get home.

## Cooking for the freezer

By cooking more than you need and freezing what you don't use, you can soon build up a stock of instant meals.

Freeze ready-cooked meals in individual portions and pack them in aluminium containers or on plates covered with foil. Let the food cool down to room temperature before putting it in the freezer.

When re-heating, keep the food covered and use a moderate oven.

## Freezing fresh food

Many foods vary considerably in price during the year. Your freezer lets you save by buying when prices are low and keeping food in store. Below we give advice on the storage times for various types of frozen fresh food, together with some suggestions on preparation.

# Fresh food in store

## MEAT

- Ensure that it is in first class condition and has been hung (especially beef) for the right length of time before freezing.
- Get your butcher to pre-pack it in the sizes and amounts you will be using.

| Product | Storage time (mths) | Hints |
|---|---|---|
| Cured meats | 1½ | Thaw before using |
| Mince | 1½ | Thaw before cooking |
| Offal | 2 | Thaw before cooking |
| Sausages | 6 | Thaw before cooking |
| Pork | 6 | Thaw before cooking |
| Beef | 12 | Thaw before cooking |
| Lamb | 12 | Thaw before cooking |

## POULTRY

- Rapid freezing is essential.
- Make sure that birds are thoroughly cool (50°F / 10°C) before freezing.
- Wrap carefully in freezer bags and exclude air before sealing.
- If freezing whole birds, do not freeze more than 3 or 4 at a time.
- Joints or portions may be handier for some recipes and will freeze quicker.

## FISH

- Be absolutely sure that they are freshly caught.
- Remove heads and tails, clean and wrap carefully in polythene.
- Get them into the freezer as quickly as you can.
- Ensure shellfish are fit for eating and not from a possibly contaminated beach.

| Product | Storage time (mths) | Hints |
|---|---|---|
| Giblets | 3 | Pack separately from the rest of the bird. Thaw before using. |
| Turkey | 12 | Thaw before cooking |
| Duck | 6 | Thaw before cooking |
| Goose | 6 | Thaw before cooking |
| Game birds | 6 | Thaw before cooking |
| Chicken | 12 | Thaw before cooking |

| Product | Storage time (mths) | Hints |
|---|---|---|
| Scampi, prawns | 1 | Freeze raw, Cook from frozen |
| Crabs, lobsters | 1 | Cook before freezing<br>Thaw before using |
| Trout, herring, other oily fish, smoked fish | 3 | Thaw before cooking |
| Cod, similar white fish | 6 | Thaw before cooking |

## *VEGETABLES*

- Those vegetables which are usually cooked before eating freeze best.
- Most vegetables should be blanched and chilled before freezing.
- Unlike meats and fish, most vegetables can be cooked from frozen.

## *To blanch*

1. Bring a gallon (5 litres) of water to the boil.
2. Lower 1lb. (0.5kg) of the vegetables into the water, using a blanching basket or sieve.
3. When water starts to boil again, start counting the blanching time.
4. Lift the vegetables from the boiler and plunge them into ice-cold water.
5. Drain them and freeze.

| Product | Blanching time (mins) | Storage time (months) | Hints |
|---|---|---|---|
| Onions | Not required | 6 | Use double thickness of polythene to prevent their flavour reaching other food. |
| Cauliflower | 3 | 6 | Break into florets. Freeze before packing. |
| Carrots | Not required | 12 | |
| Beans (broad, French, runner) | 2 | 12 | Top and tail French beans. String and slice runners. Freeze before packing. Store in portion-size bags. |
| Sprouts | 2 - 3 | 12 | Freeze before packing. |
| Peas | 1 | 12 | Freeze before packing. |
| Spinach | 2 | 12 | Drain well before freezing. |

## FRUIT

Most types of fruit freeze well, although some freeze best if prepared for storage in a particular way. For example, soft fruits are best frozen on open trays and then packed into rigid containers. Other fruits are best frozen in sugar layers or in syrup. We suggest you refer to a specialist freezer cookery book for details.

## Where to load fresh food

- Put it in the top basket.
- Leave spaces between the packages.
- Do not place food for freezing in direct contact with already frozen food.

## Don't freeze too much at once

Freezing a large amount of food will cause it to freeze slowly, possibly reducing its shelf life. So don't freeze more than the freezing capacity of your freezer.

Refer to serial label fitted inside the fridge on the left, for details of Energy Consumption, Freezing Capacity, Gross and Storage Volumes.

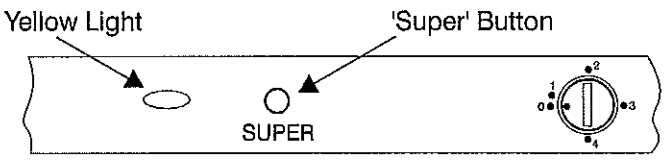


(Note: may also be marked 'FAST FREEZE')

When freezing the maximum capacity, immediately before loading of fresh food, press the 'Super' button on the control panel, this will cause the yellow light to illuminate and will freeze the food more quickly. Once the food is frozen to the correct temperature, the 'Super' function will cancel and return to normal running. You may stop the 'Super' operation by pressing the button a second time. The 'Super' button should be held for 3-4 seconds when initialising or cancelling the 'Super' function.

If the room temperature is low or only a small quantity of food is to be frozen DO NOT use the 'Super' button as the refrigerator may get too cold.

## Saving food if there's a power failure

1. If you know that the power supply is to be interrupted, turn the thermostat to 4.
2. Don't open the door until the freezer is operating normally again. As long as the power is restored within 10 hours, the food should not deteriorate too much.
3. Keep the thermostat on setting 4 for a further 24 hours after power is restored.

NOTE: The storage life of the items in the freezer may have been shortened. Frozen food that may have been defrosted must be used immediately.

## FOODS NOT SUITABLE FOR FREEZING

**Fruit and Vegetables**

Bananas and Avocados ..... turn black
Boiled potatoes ..... unless mashed
Raw celery ..... loses crispness
Salad vegetables ..... loses crispness
Raw whole tomatoes ..... collapse
Eggs ..... yolks and whites may be frozen separately

**Sauces etc.**

Glazes ..... turn runny
Cream ..... separates
Yoghurt ..... separates
Custard ..... separates
Soft meringue ..... goes watery

# Looking after your fridge-freezer

## *No defrosting!*

You will **NEVER** have to defrost this unit! Frost won't form in the freezer as its evaporator mechanism is kept clear by a heater which cuts in automatically at just the right moment. Frost will form on the rear wall of the fridge and is periodically disposed of by the normal operation of the auto defrost system.

If at any time you see any unwanted ice, it will be the result of somebody not closing the door properly - or perhaps running the appliance under conditions of unusually high humidity. Closing the door and/or getting rid of the damp will put things right!

## *Keep in the cold*

When freezing a large quantity of food, remove the basket and close the door. Load the basket outside the cabinet, then replace - again ensuring that the door is properly closed. To remove the basket, gently pull and lift the front of the basket at the same time.

## *Efficient freezing*

This is new technology - It's the air that does the freezing. Leave 25mm (1 inch) between packs for proper circulation and faster freezing.

The smaller the food, the quicker it freezes. So cut food into individual portions and pack separately before freezing.

## *Water Drain*

When the fridge defrosts, water drains away through the hole in the drip trough at the back.

Keep the drain hole clear of food particles or it may become blocked and fill up with water, eventually overflowing into the fridge.

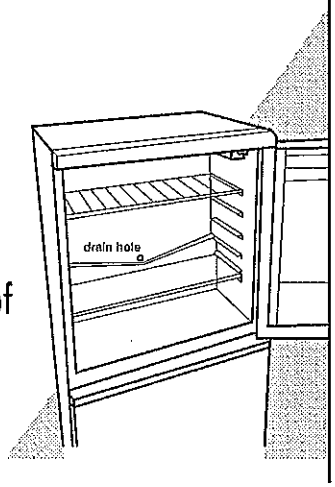


## *Cleaning*

Outside:

- clean with warm soapy water
- rinse
- wipe dry.

Inside:

- clean regularly with a tepid solution of bicarbonate of soda
- rinse
- wipe dry.

**NEVER** use spirits or solvent cleaners.

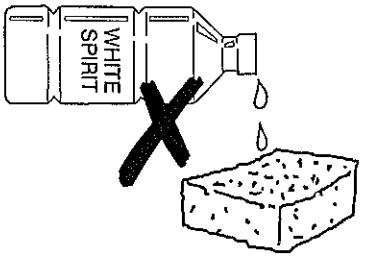


# Safety advice

Here are a few precautions that you can take to ensure that no accidents happen.

1. Never keep in your freezer:
   - ~ Carbonated drinks
   - ~ Medicines
   - ~ Ether
   - ~ Benzine
   - ~ Any other volatile or inflammable substances.

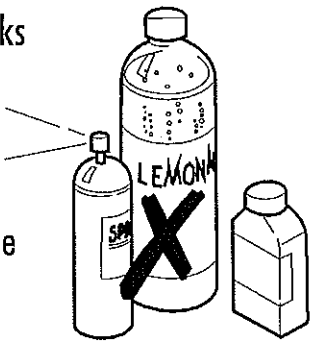


2. Never consume ices direct from the freezer:
   - ~ They can cause low temperature skin burns.
   - ~ Always leave them out for a few minutes until they are just starting to melt before consuming.

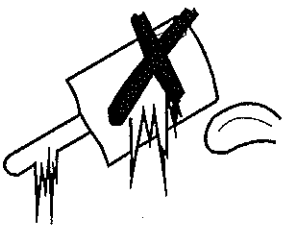

3. Always unplug before cleaning or moving.

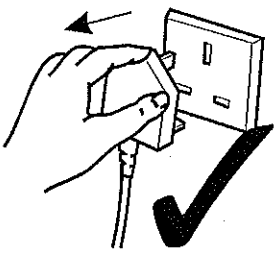

# What to do when going on holiday or moving house

### *Normal Holidays*

- Leave the fridge-freezer running at normal temperature.
- Check before you go that the mains electricity is on.

### *Longer Absences*

- Run down food supplies in the period before you go.
- Before leaving:
  - ~ Completely empty the fridge and the freezer.
  - ~ Disconnect from the mains.
  - ~ Clean inside the fridge and freezer with a weak solution of tepid bicarbonate of soda.
  - ~ Leave the doors open until you return.

### *Moving house*

- When transporting the fridge-freezer, it is advisable to keep it upright.
- Take this book with you, and use it to re-install the fridge-freezer properly in your new home.

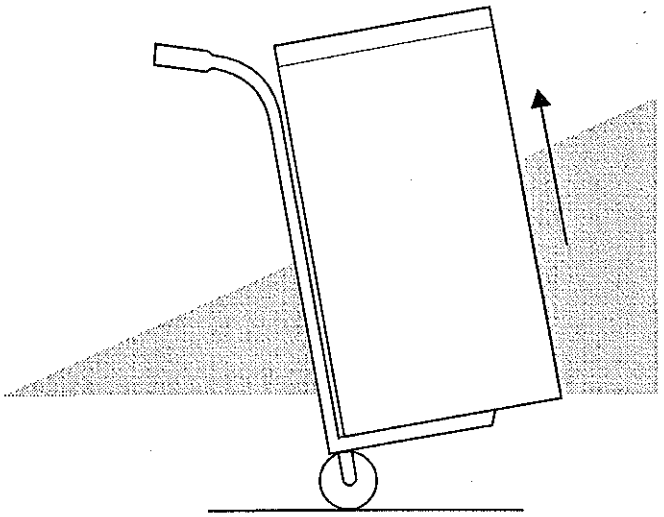

# If you think your fridge-freezer is faulty

Before calling out the service engineer, please follow the simple checks given on the following pages. It may be something minor which you can solve yourself.

### *Fridge-freezer is excessively noisy*

NOTE: Slight bubbling noises are normal for this type of refrigeration system, as is some noise from the fan used to circulate the cold air.

1. Is anything at the rear of the cabinet touching the wall or skirting? YES ▶ Move the cabinet further away from the wall.

   NO ▼

2. Is the cabinet standing level and steady? NO ▶ Adjust the feet until stable.

   YES ▼

3. Are the tubes at the rear rattling? YES ▶ Ease them gently apart.

   NO ▼

4. Contact your local Electricity Company or service dealer.

## *Fridge-freezer is not keeping food cold enough*

1. Has the door been left open?
   YES ▶ Keep the thermostat dial on 5 until the freezer is back to its normal operating temperature.

   NO ▼

2. Has there been a recent interruption in the power supply?
   YES ▶ Keep the thermostat dial on 5 for 24 hours after power is restored.

   NO ▼

3. Is the thermostat set correctly?
   NO ▶ Adjust to a higher setting.

   YES ▼

4. Is the interior Light on?
   YES ▶ Fridge-freezer is faulty. Contact your local Electricity Company or service dealer.

   NO ▼

5. Is the fridge-freezer plugged in?
   NO ▶ Plug in and check that the light comes on. If so, fridge-freezer is operating correctly.

   YES ▼

6. If plug socket has a switch, is it turned on?
   NO ▶ Switch on. If interior light comes on, fridge-freezer is operating correctly.

   YES ▼

7. Has the fuse blown in the plug?
   YES ▶ Replace fuse (see page 4, step 9) and plug unit back in. If interior light comes on, fridge-freezer is operating correctly.

   NO ▼

8. Has the fuse blown on the main fuse board? (You can check this by connecting another appliance to the same socket).
   YES ▶ Replace fuse and plug back in. If interior light comes on, fridge-freezer is operating correctly.

   NO ▼

9. Contact your local Electricity Company or service dealer.

## *If the yellow light flashes on and off*

Contact your local Electricity Company or service dealer.

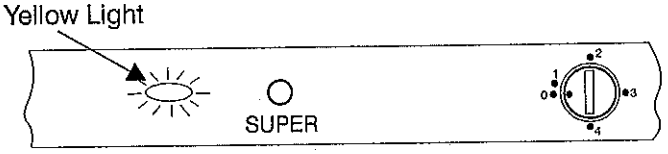

## *Replacing the light bulb (if fitted)*

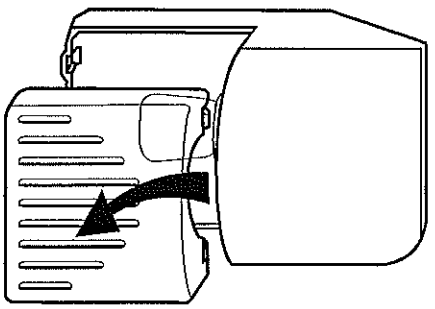

You can obtain a spare bulb from your local Electricity shop or dealer.

The type required is a 240v, 15w, small Edison screw.

To fit the new bulb:

1. Unplug the fridge-freezer.
2. Remove the lamp cover, by springing out the retaining lugs. It may help to use a screwdriver to lever it off.
3. Remove the old bulb, by unscrewing it (turning anti-clockwise).
4. Insert the replacement bulb, screwing it up until finger tight.
5. Clip the cover back in place.
6. Plug the fridge-freezer back in.

# If you need to get your fridge-freezer serviced

If you have any problems with your fridge-freezer, contact either the place where you bought it or your nearest service department.

Please state the nature of the fault and have proof of purchase available if under guarantee.

## *Genuine HOOVER spares*

Always replace parts with genuine HOOVER spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

## *HOOVER Service*

Should you require service at any time please call your local HOOVER Service Office listed on the back page of this book.

Hoover have a computerised nationwide service network of over 500 engineers who will respond quickly to your call and guarantee your repair for 12 months.

## *Hoovercare*

To maintain your HOOVER product in peak condition you may also wish to take out a Hoovercare policy, which for an annual payment provides a comprehensive maintenance and repair scheme.

For further information telephone your local HOOVER Service Office listed overleaf.

## *Free 5 Years Parts (UK & Eire only)*

In the first year Hoover will replace and fit any defective parts free of charge for parts and labour. In years 2-5 defective parts will be supplied free and fitted in UK and Eire by Hoover and the appropriate refrigeration labour charges paid.

SN63F

# HOOVER SERVICE

FOR YOUR LOCAL ENGINEER PLEASE CALL OUR NATIONAL NUMBER

# 0990-400600

Areas covered by HOOVER SERVICE DEALERS
Also Channel Islands, Scilly Isles, Orkney, Shetlands
See local telephone directory

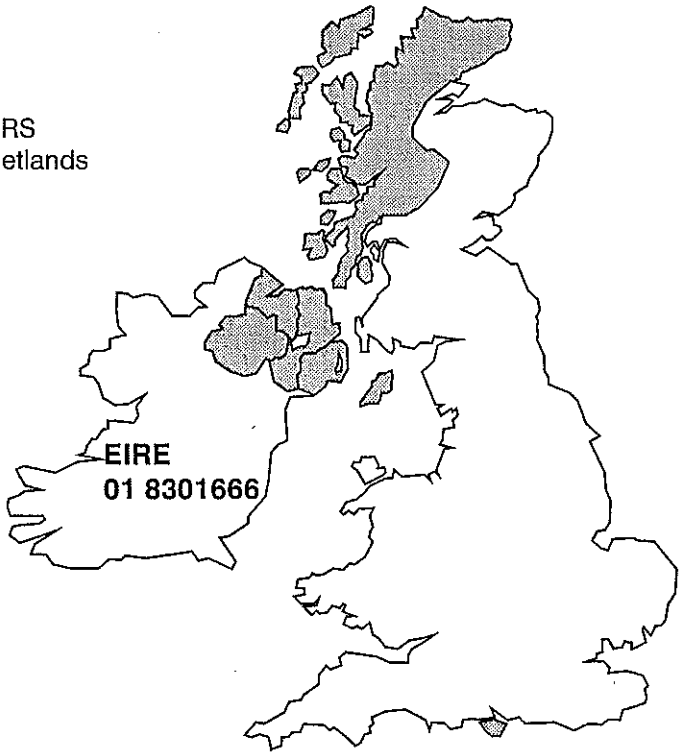


Hoover policy is one of continuous development and for this reason we reserve the right to change specifications without prior notice

© 2001 ® Registered Trade Mark

HOOVER LIMITED DRAGONPARC ABERCANAID MERTHYR TYDFIL MID-GLAMORGAN CF48 1PQ

## YOUR GUARANTEE

Hoover guarantees all parts of this product for 5 years from the date of purchase. During that time HOOVER engineers will replace or repair all defective parts free of charge, except for parts subject to fair wear and tear such as interior lamps.

The engineers labour costs are chargeable after the first 12 months.

To qualify for benefits under the guarantee, you must be able to provide proof of date of purchase and the appliance must have been supplied, installed and used in accordance with Hoover instructions. Consequential losses and accidental damage to the product are not covered by the guarantee.

If you have any trouble with your HOOVER product simply telephone your nearest Hoover Service Office.

This guarantee does not affect your statutory or common law rights.

Hoover cannot be responsible for the results of using this machine for any purposes other than those described in these instructions.

97055578/G